

The Application Note is pertinent to the Unidrive Family

## Parameter Restoration

When replacing a Unidrive, critical drive application parameters from the original setup must be re-established in the replacement drive. There are 3 basic methods of doing this:



- 1 **Manual entry of those parameters that are different from factory defaults. These would come from a printed list during the original setup.**
- 2 **By downloading a previously saved data file via UniSoft running on a PC using the UD71 Communication Module ( *click on Drive symbol below to obtain info on UD71 and UniSoft* )**



- 3 **By selecting which parameter set (out of 8 total) to resurrect from a previous stored file using the UD55 Parameter Storage/Cloning Module**



- |                     |
|---------------------|
| 1- Pull Roll        |
| 2- Dryer Roll       |
| 3- Laminator        |
| 4- Gravure Roll     |
| 5- #1 Nip Roll      |
| 6- Exit Accumulator |
| 7- Rewinder         |
| 8- Unwinder         |

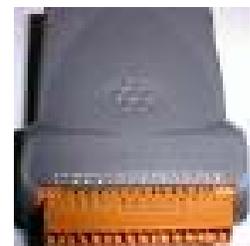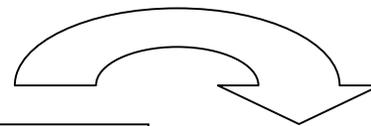

UD55 Parameter  
Storage/Cloning Module