 





- Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89


PRCF 083

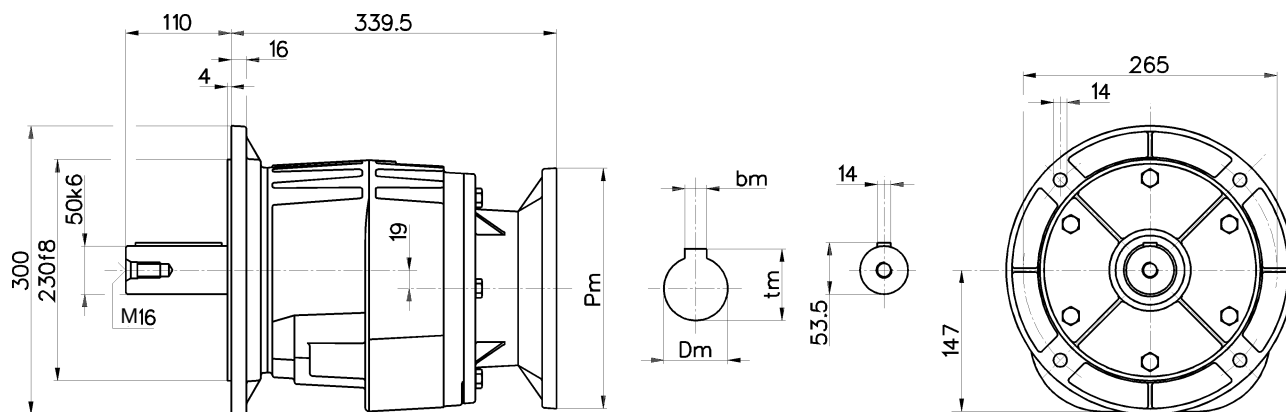

 
- Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89



PRC 102

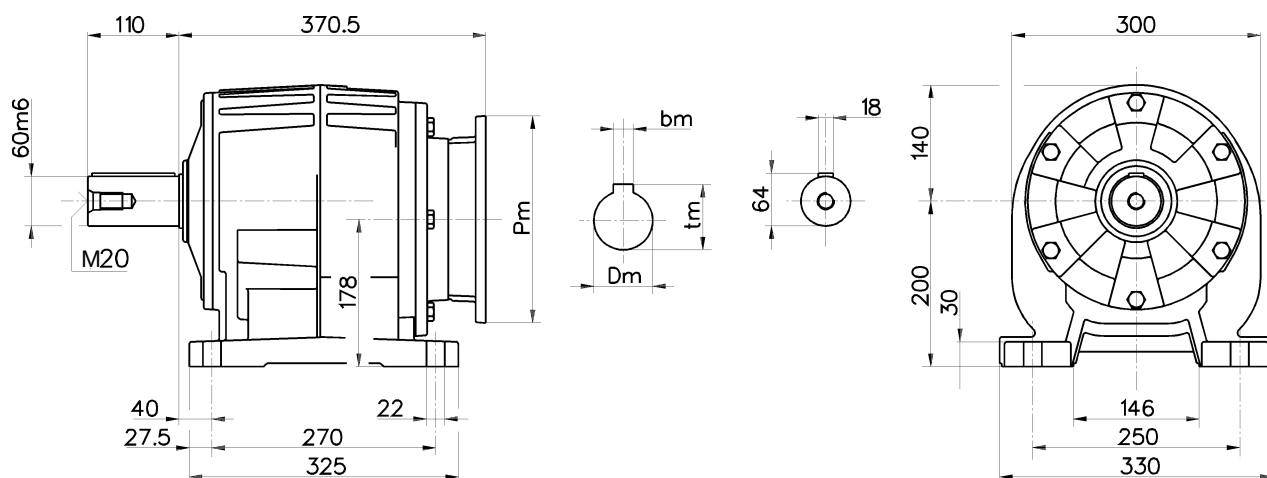 


PRCF 102

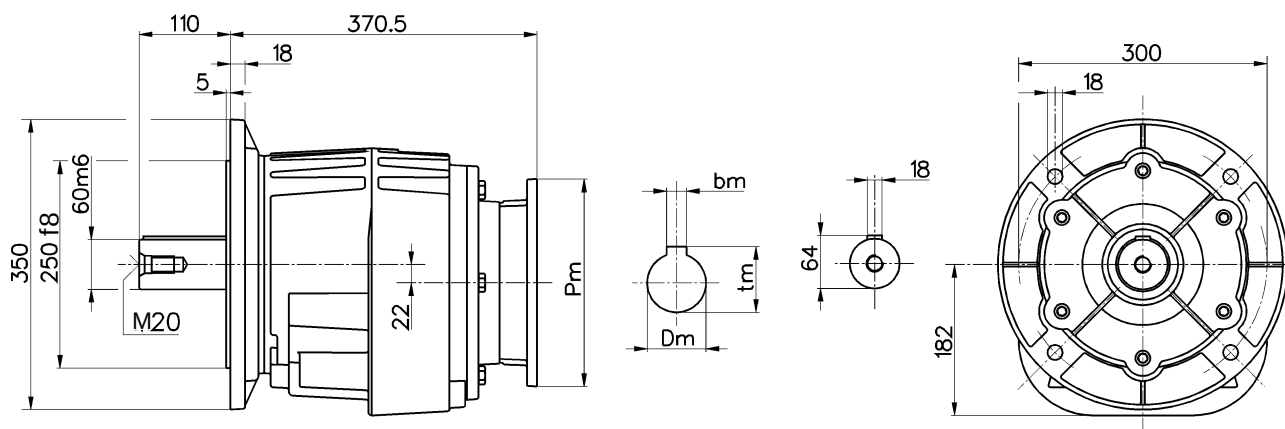 


- Peso senza motore ~76 kg
- Weight without motor ~76 kg
- Gewicht ohne Motor ~76 kg
- Poids sans moteur ~76 kg
- Peso sin motor ~76 kg

Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89

 
PRCF 103

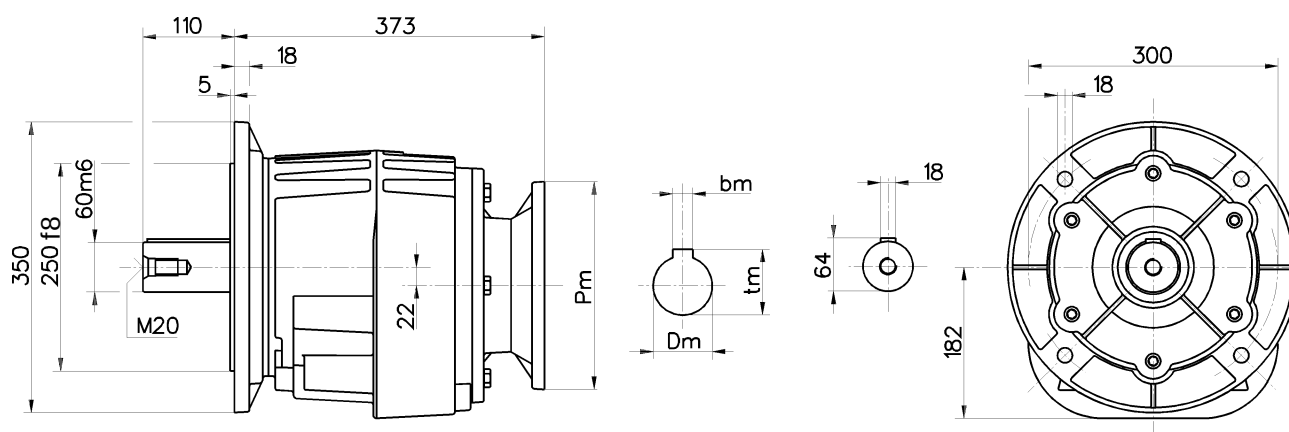


- 81

 

PRC 122


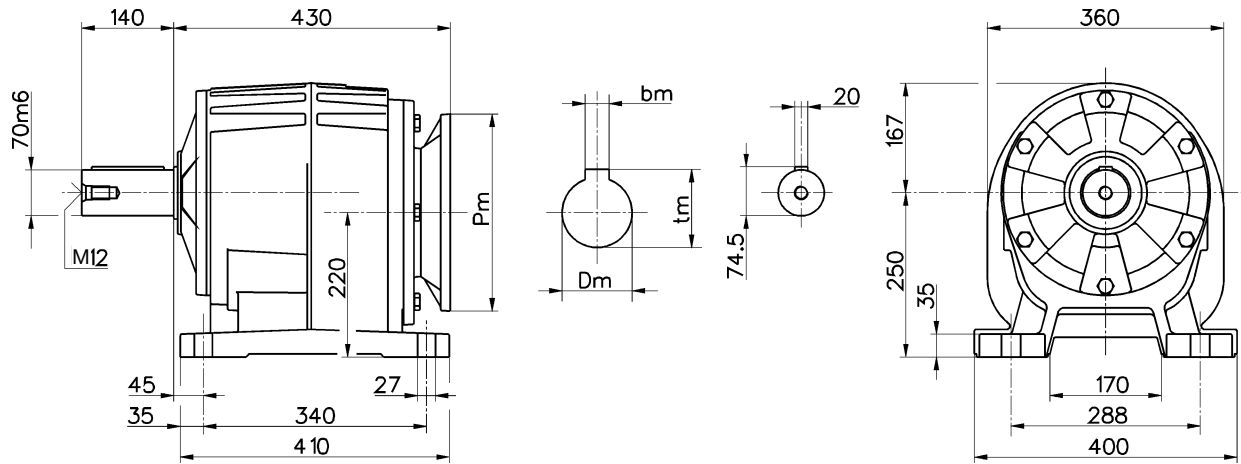 


PRCF 122

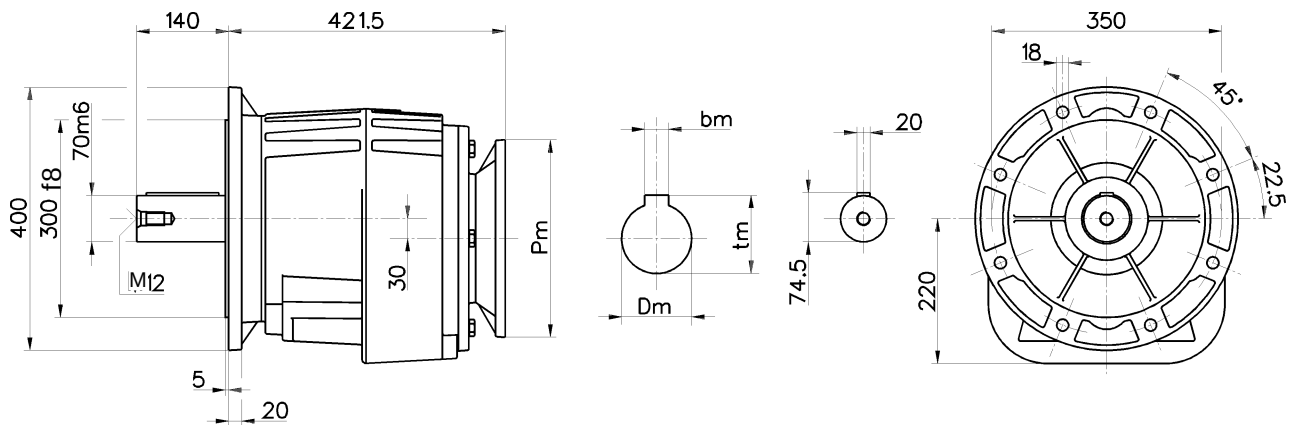 


- Peso senza motore ~125 kg
- Weight without motor ~125 kg
- Gewicht ohne Motor ~125 kg
- Poids sans moteur ~125 kg
- Peso sin motor ~125 kg

  Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89

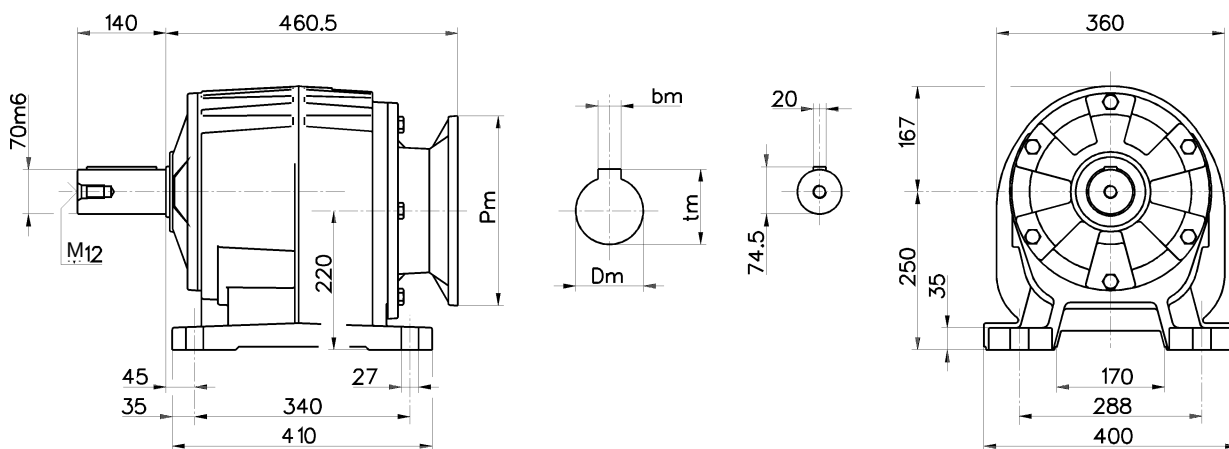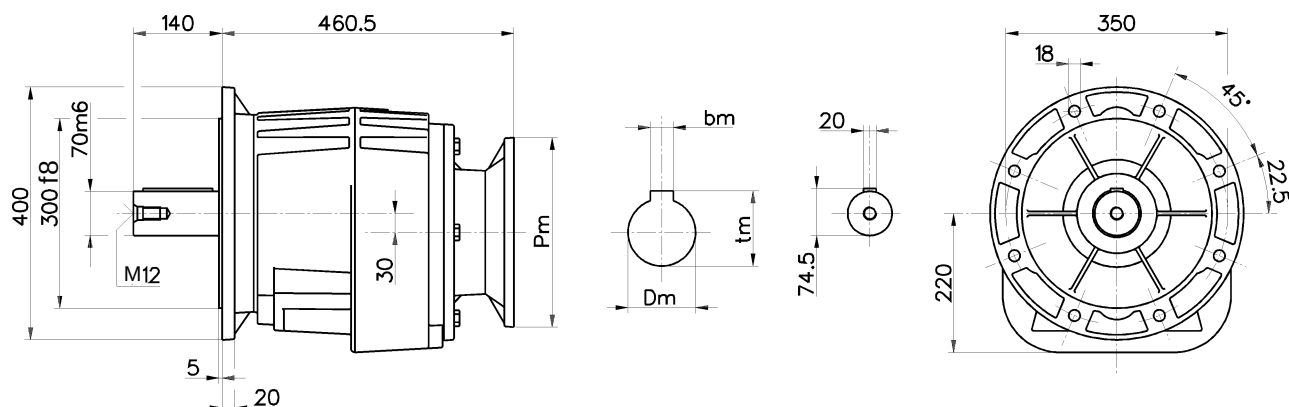
PRC 123

PRCF 123

 
- Peso senza motore ~128 kg
- Weight without motor ~128 kg
- Gewicht ohne Motor ~128 kg
- Poids sans moteur ~128 kg
- Peso sin motor ~128 kg


Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89

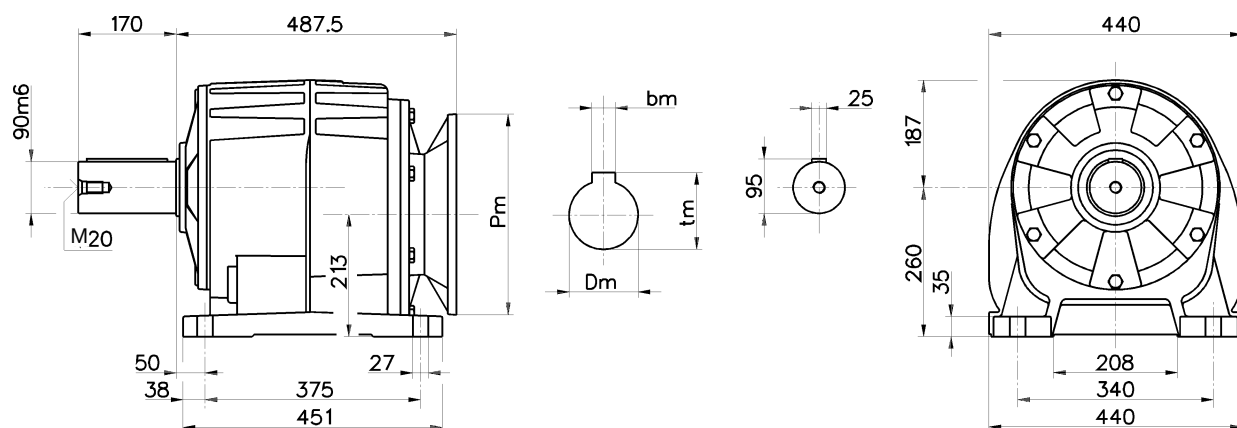 

PRC 162





 PRCF 162

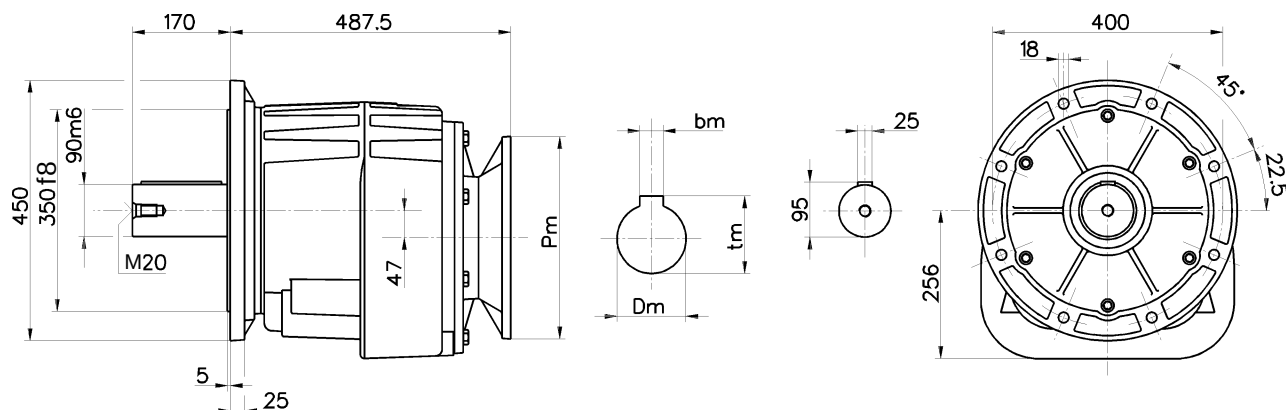


- Peso senza motore ~190 kg
- Weight without motor ~190 kg
- Gewicht ohne Motor ~190 kg
- Poids sans moteur ~190 kg
- Peso sin motor ~190 kg

  Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89

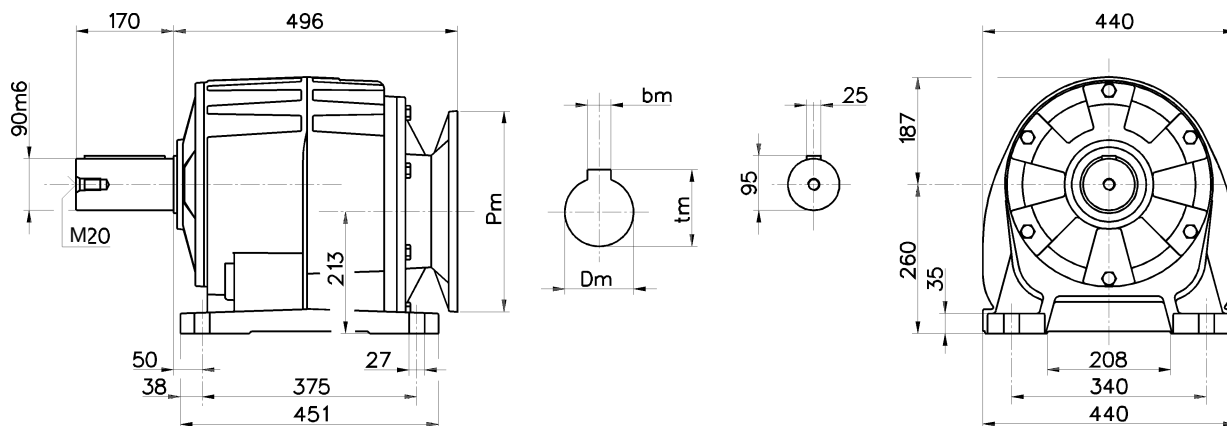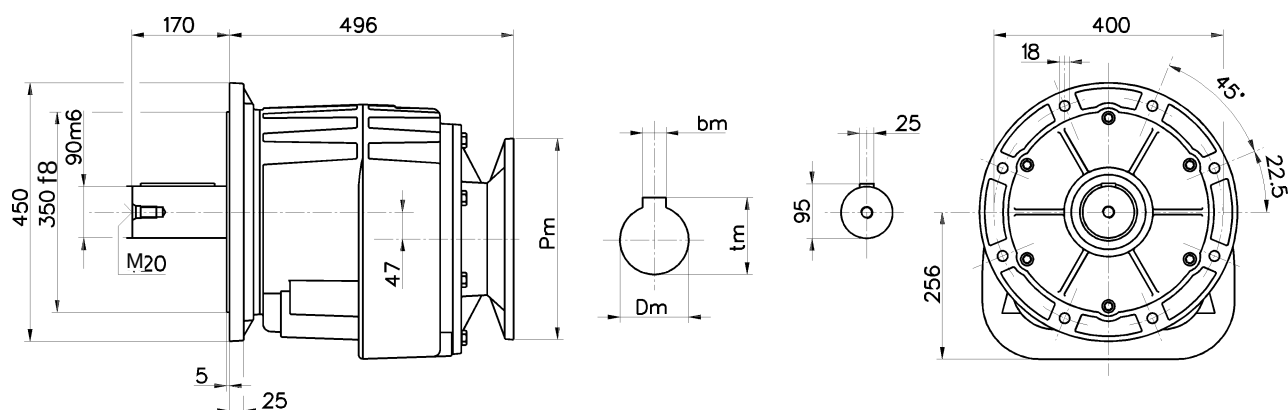PRC 163

PRCF 163

 
- Peso senza motore ~195 kg
- Weight without motor ~195 kg
- Gewicht ohne Motor ~195 kg
- Poids sans moteur ~195 kg
- Peso sin motor ~195 kg


Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89




081

Dimensioni / Dimensions / Abmessungen / Encombres / Dimensiones

 
TRC 081

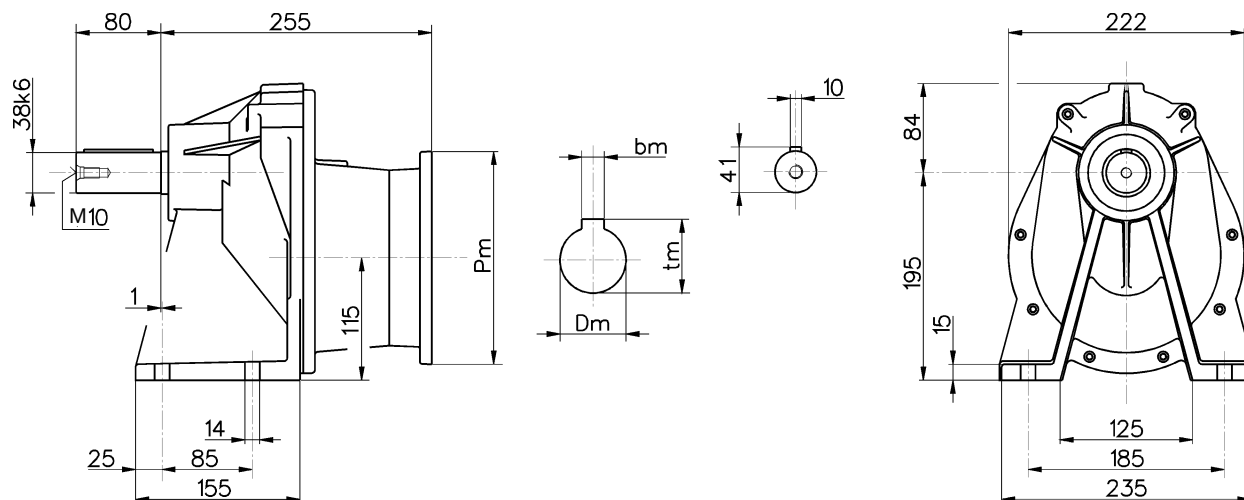




TRCF 081

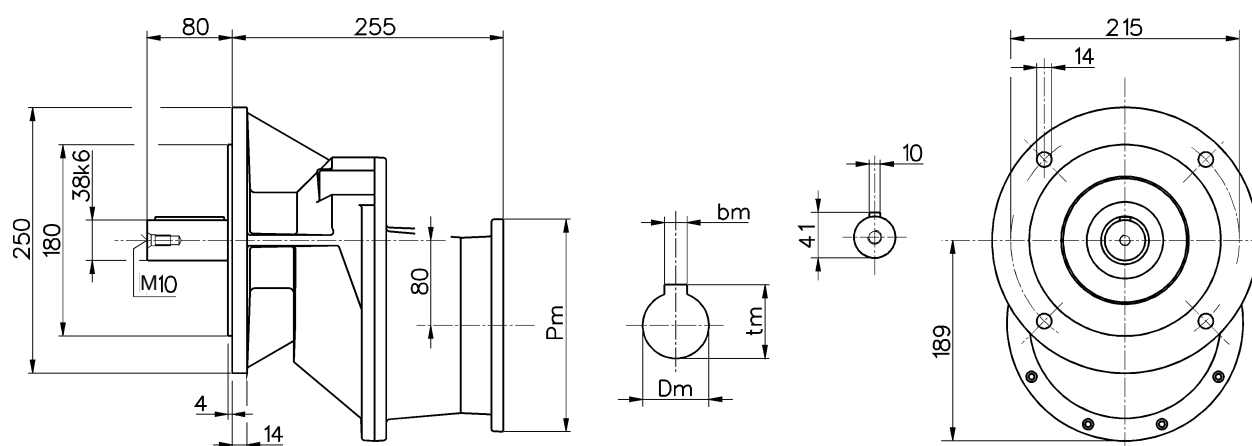 


TRC 081 Mono

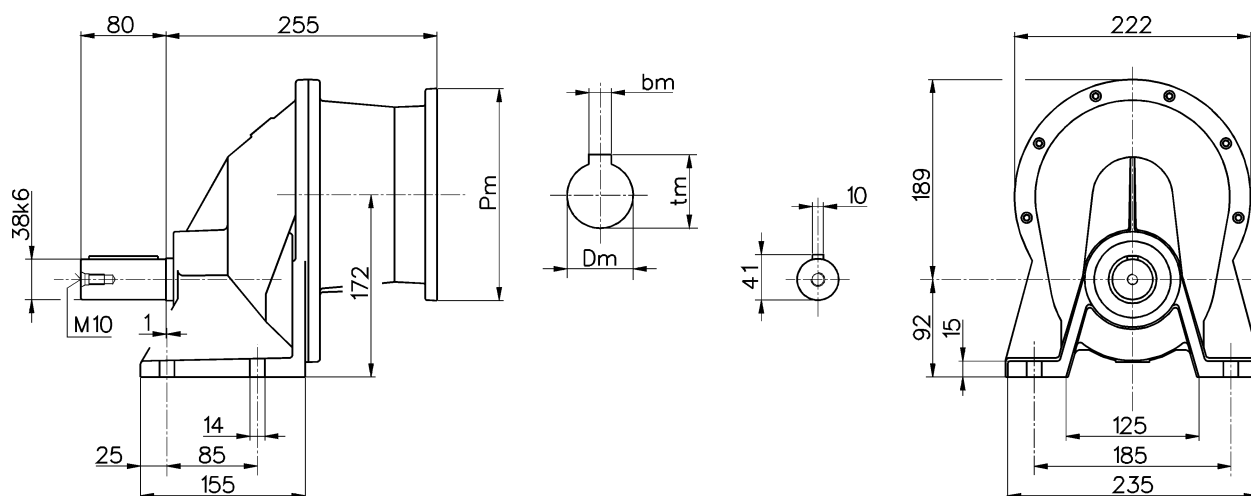 


Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89

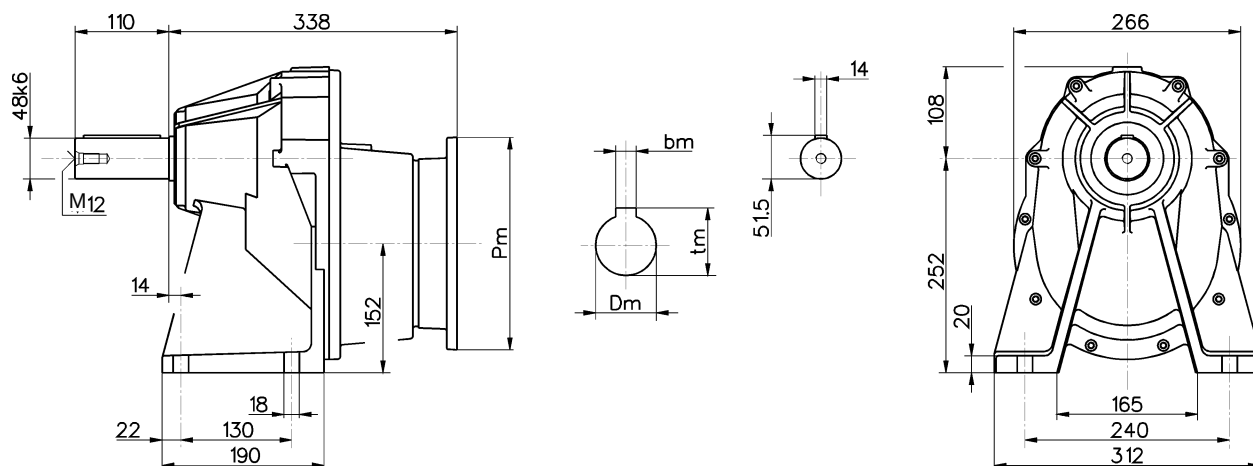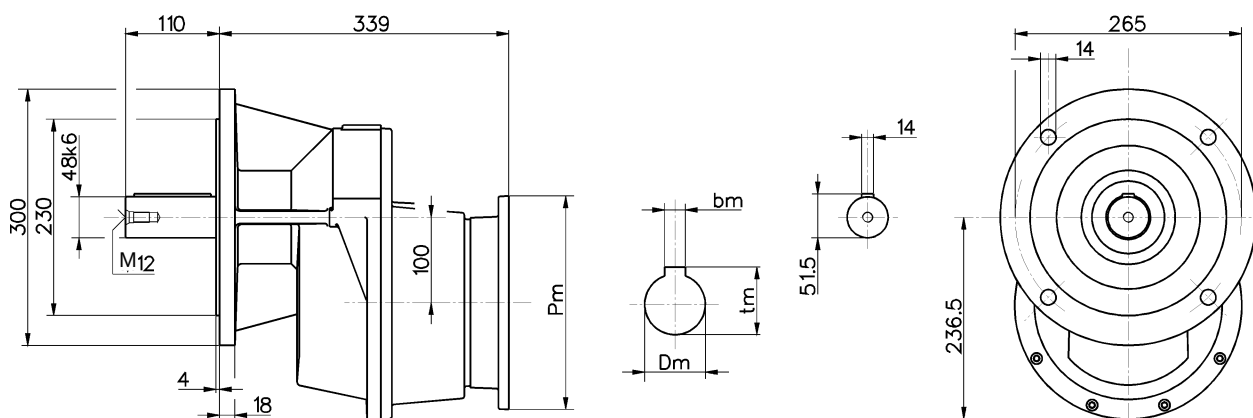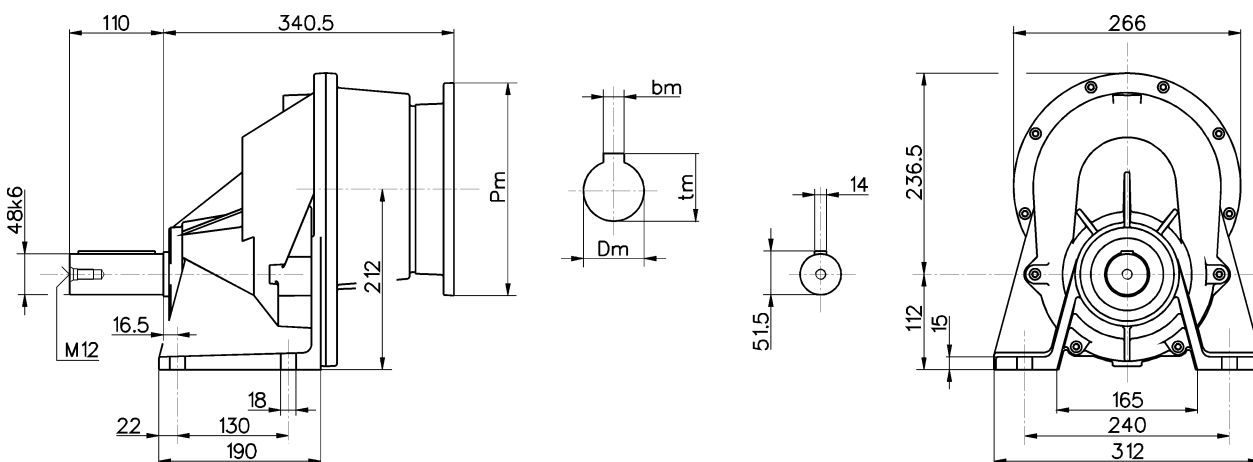   TRC 101

 TRCF 101

TRCF 101 Mono

 
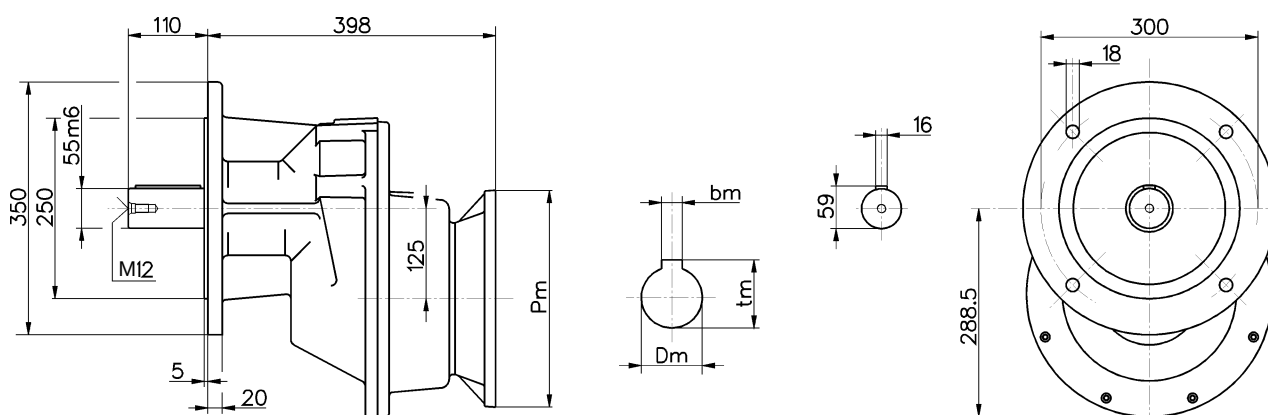 
Per le dimensioni relative alla zona attacco motore (P_m , D_m , b_m , t_m) fare riferimento alla tabella di pag. 89
For the dimensions concerning the motor connection area (P_m , D_m , b_m , t_m) please refer to the table shown at page 89.
Zu den Abmessungen des Motoranschlußflansches (P_m , D_m , b_m , t_m) siehe Tabelle auf Seite 89
Pour les dimensions concernant la zone de montage du moteur (P_m , D_m , b_m , t_m) lire SVP le tableau à la page 89
Para las magnitudes correspondientes a la zona del motor (P_m , D_m , b_m , t_m) consulte la tabla de la página 89

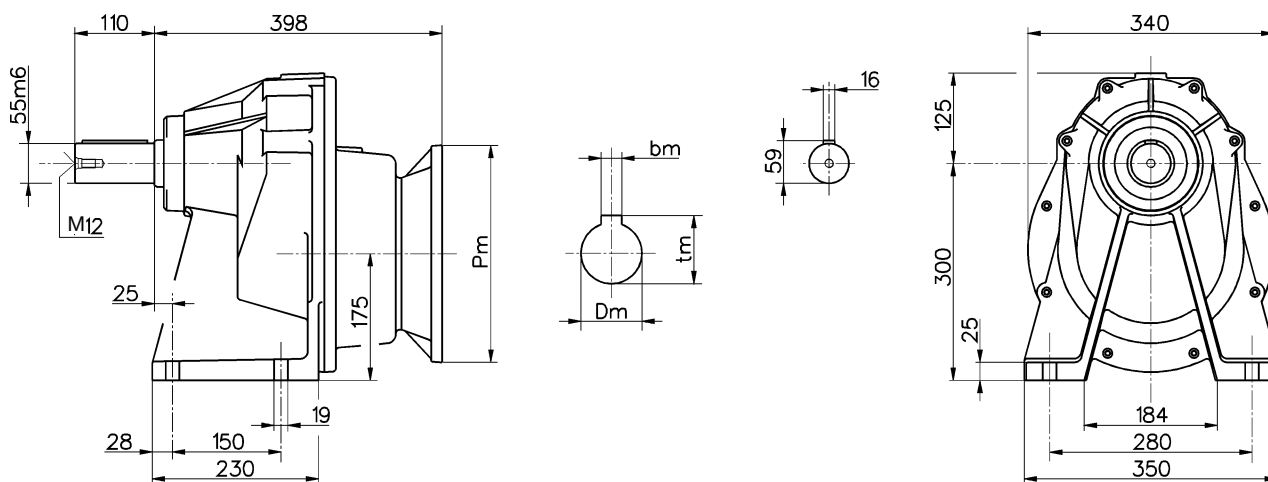


TRC 121



TRCF 121




 TRC 121 Mono

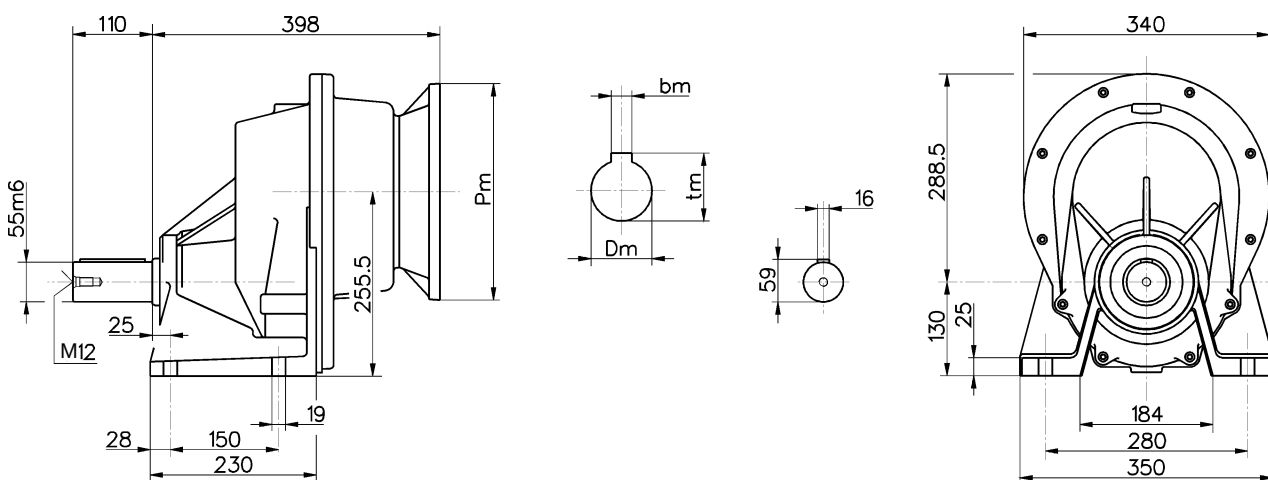


Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 89
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 89.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 89
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 89
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 89

 PAM B5 - Dimensioni / Dimensions / Abmessungen / Encombresments / Dimensiones

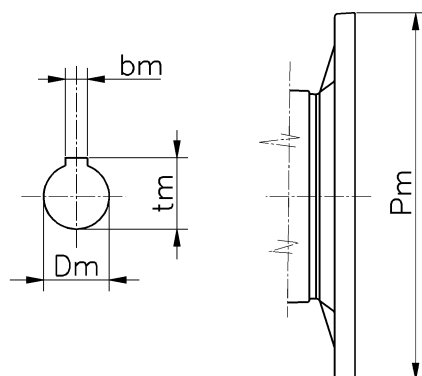

B5	IEC										
	056	063	071	080	090	100	112	132	160	180	200
Pm	120	140	160	200	200	250	250	300	350	350	400
Dm	9	11	14	19	24	28	28	38	42	48	55
bm	3	4	5	6	8	8	8	10	12	14	16
tm	10,4	12,8	16,3	21,8	27,3	31,3	31,3	41,3	45,3	51,8	59,3

 PAM B14 - Dimensioni / Dimensions / Abmessungen / Encombresments / Dimensiones

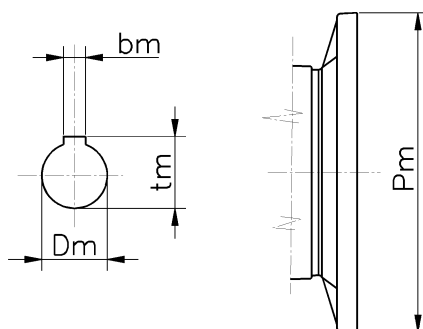

B14	IEC							
	056	063	071	080	090	100	112	132
Pm	80	90	105	120	140	160	160	200
Dm	9	11	14	19	24	28	28	38
bm	3	4	5	6	8	8	8	10
tm	10,4	12,8	16,3	21,8	27,3	31,3	31,3	41,3